


Mueller
Human-Power

4893 Artino Ct. Eureka CA 95503
Toll Free 877-267-1645 email: mhp@Windwrap.com

Windwrap® XT Fairing and XT Mounts Instructions

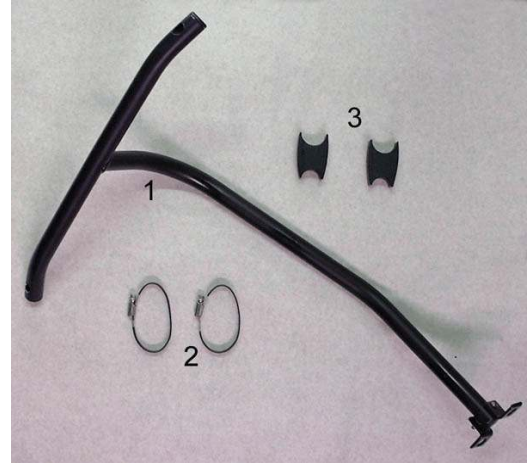

List of Parts:

- 1: T Frame, 1 each
- 2: Band Clamp, 2 each
- 3: Block, 2 each.

Thank you for choosing a Mueller Human-Power windscreen. Upon unpacking, allow your fairing to straighten out for a while before installing. You may want to leave the paper mask on until the fairing is completely installed to reduce scratching.

Mounting Hardware:

Mounting Hardware model number MH XT is designed for use on Bacchetta, RANS Force 5, and Volae dual 650 or 26" wheeled recumbent bicycles. It is made of 6061 T6 Aluminum. The MH XT mount system weighs 13.5 ounces with wing screws.

The Windwrap® XT fairing which is designed to work with these mounts weighs only 1 pound 5 ounces for model WW XT6 and 15 ounces for model WW XT4.

So the complete XT4 fairing and mount weighs less than 2 pounds.



Installation of Mounts:

Put one of the of the Band Clamps around the base of the derailleur mast and one just below the derailleur. Arrange them so the screw heads are on opposite sides facing forward.

Put the T Frame into the Band Clamps. Assemble and tighten the lower Band Clamp some then put a Block in between the T Frame and the derailleur mast at that clamp. Tighten the lower Band Clamp more, but leave a little loose. Assemble the top Band Clamp and begin tightening. Then install the other Block under the top Band Clamp and tighten more but leave slack enough to move T Frame. Install the fairing on the T frame. Adjust the fairing so that the rider can just see over it and so that it

clears the riders feet throughout the stroke.

Once the fairing is adjusted and straight tighten the Band Clamps snug.

Because of the high bottom bracket to seat ratio of these bikes extremely reclined seats may cause the rider's eyes to be lower than the fairing can be adjusted. Raise your seat angle in this case.

Also there are two sets of holes in the front of the fairing. This



allows the angle of the fairing to be adjusted.

Fairing Instructions.

Polycarbonate is one of the toughest plastics but it still scratches easily when compared to glass or metal. So handle carefully. Do not to slide things across the surface. Wash your hands to remove any dirt that may cause scratches. You can touch the Polycarbonate with your hands without scratching if you don't slide them across the surface.


Installation:

Fasten the fairing using the supplied rubber expanding nuts as shown in the diagram.

Transport and Care of your MHP Fairing:

Save the box and foam sheet that the fairing was shipped in. When you transport your bike on the car remove the fairing from the bike. Roll the fairing in the foam sheet and place the fairing in its box.

Rubber Nut and Wing Screw Set Order of Assembly

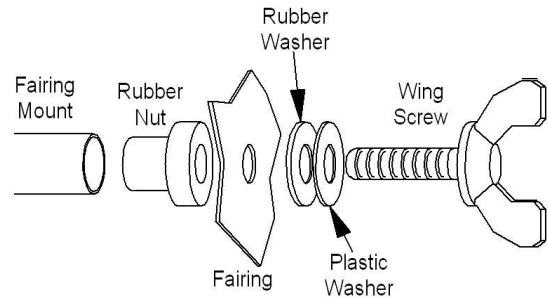


To keep your fairing in top shape handle it as little as possible. Wash with a hose or in a shower flowing plenty of water over the fairing while lightly wiping with a soft cotton cloth. Toothpaste and a wet soft cloth will remove some scuffs. Never use whitener toothpaste because it is too abrasive. Restore luster with Miguire's Car Wax. Also scratch removal compounds like Mirror Glaze can be found or ordered at art supplies (picture framing,) auto supplies, motorcycle shops, and plastic shops.

If things just aren't working right please give me a call toll free. I will do my best to help you out. 1-877-267-1645

Wishing you lots of bug free smiling!

Mark E. Mueller

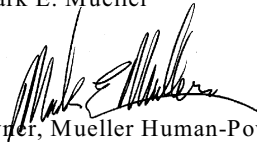

owner, Mueller Human-Power

Warranty:

MHP fairings and mounting hardware are warrantied against manufacturer's defects for one year after purchase. MHP Fairings are warrantied against cracking for one year if installed properly on MHP mounting hardware.

Disclaimer:

In no event shall Mueller Human Power be liable for any indirect, incidental or consequential damages from the sale or use of the product.